



AirLink™ **Blue**

Quick Start Guide

Rev. March 2026







AirLink Blue Quick Start Guide

Overview

AirLink **Blue** gives you the ability to manage LSI lighting installations based on qualified Bluetooth Mesh technology. This guide will cover the following stages of commissioning:

1. Planning (with an account created in the AirLink Blue web portal)
2. Implementation on Site (with the AirLink Blue Mobile app)

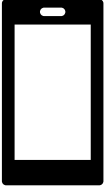Planning	AirLink Blue Web App	QR Code to Web App
	<ol style="list-style-type: none">1. Create an account2. Create a Project3. Create Areas & upload files or site plan images4. Create zones & set up light control profiles	
Commissioning	AirLink Blue Mobile App	QR Code to Mobile App
	<ol style="list-style-type: none">5. Go on site, add luminaires & sensors to the zones, test the lighting control6. Assign switches to the zones/any additional devices	

This guide covers the initial stages of setting up a project and programming devices. To set up the system with project specific features, please see the following documents

- Zone Profile Guide
- Sensor Programming
- Scheduling
- Complex Lighting Applications Guide
- AirLink Blue User Manual

AirLink Blue Quick Start Guide

1. Create an Account


1. Go to the [AirLink Blue App](#)
2. On the sign-up tab enter your company name, full name, email address, and create a password
3. Click the sign-up button
4. Check your inbox (and spam folder) for the activation link & click on it to activate your account

Please verify your email

We have sent you an activation link to the john.smith@company.com

[RESEND ACTIVATION LINK](#)

or go back to [login page](#)

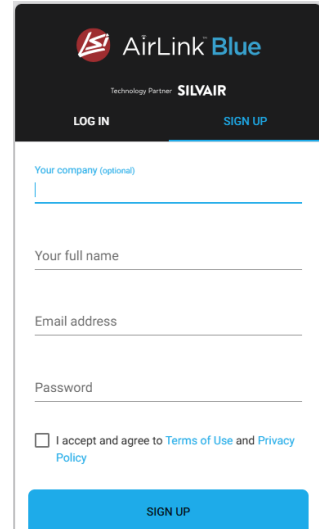


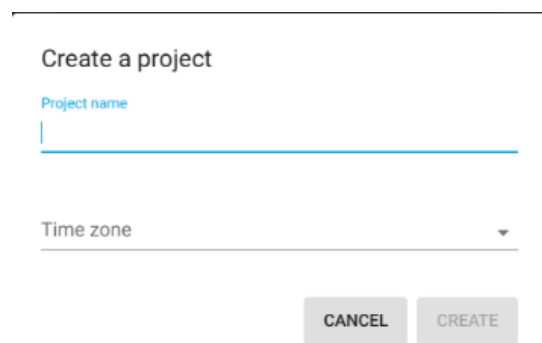
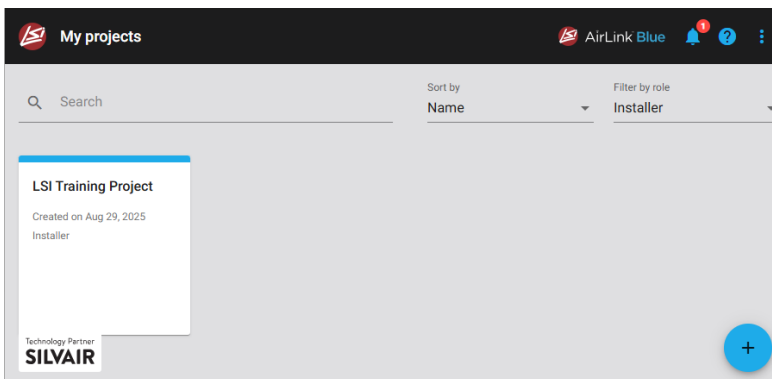
The sign-up form is titled "AirLink Blue" with the SILVAIR logo. It includes fields for "Your company (optional)", "Your full name", "Email address", and "Password". There is a checkbox for "I accept and agree to Terms of Use and Privacy Policy" and a "SIGN UP" button.

2. Creating a Project



The project is a separate lighting installation created in AirLink Blue. It can be as large as a whole building or site, or as small as a single room. Each project is a single Bluetooth mesh network that is separated from other such networks. A project can consist of multiple areas.

1. Log in to AirLink Blue web app
2. Click  to create a project



The "Create a project" form has two main fields: "Project name" and "Time zone". Below the fields are "CANCEL" and "CREATE" buttons.

3. Enter a name for the project, select the correct time zone and click **Create**






AirLink Blue Quick Start Guide

3. Create an Area



An area represents a part of a project – typically a floor, but it can also be a part of a large floor, or even a part of a building, such as a parking lot. All devices in an area must be able to communicate with each other. Areas can include a floor or site plan to help the user navigate the project. Dividing a project into areas improves clarity and simplifies navigation.

1. Create a new area by clicking 
2. Give the area a name, if applicable, upload the site plan/lighting plan
 *Site Plan/Lighting Plans can only be uploaded using the web portal*
3. Add additional areas as required by repeating steps 1 & 2

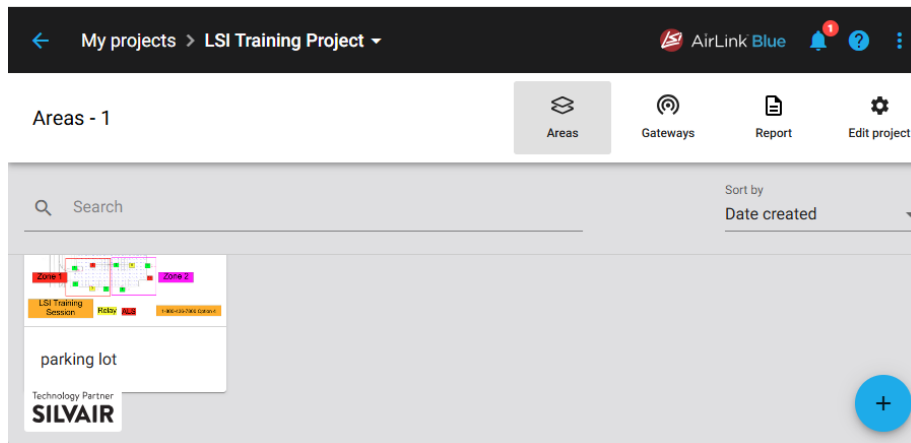

AirLink Blue Quick Start Guide

4. Create a Zone



An area consists of zones that contain devices (luminaires, sensors, and switches) that have been commissioned using the AirLink Blue mobile app. A zone can be a whole room or a part of it, or a separate space. All devices in the zone operate according to the control profile set up for the zone.

1. Open an area
2. Click on the floor or site plan to add a zone, to move the zone drag it to the desired location
3. Enter a name for the zone
4. Select a default profile or create a new profile

i *Moving a zone can only be done on the web portal, adding zones on the mobile app will automatically place the zone icon.*

i *For more information on profiles see ALB Profile doc*

Zone name
Conference Room

Profile

CLOSE


-
- P1. Conference Room
Vacancy sensing with daylight harvesting
 - P2. Open office
Occupancy sensing with daylight harvesting
 - P3. Break room
Vacancy sensing
 - P4. Egress corridor
Occupancy sensing
 - P5. Storage room
Manual control
 - P6. Restroom

5. Add Additional Areas & Zones



AirLink Blue Quick Start Guide

5. Adding & Programming Devices

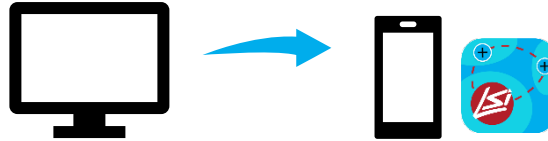

Once you have set up the project, you will need to use the iOS Airlink Blue App to commission the fixtures/devices.

- Install the AirLink Blue app on your iOS device
- Make sure your device is connected to the internet and Bluetooth is ON
 - 1) Navigate to the Project and Area that you created
 - 2) Select the zone to group fixtures/devices into by clicking on the zone
 - 3) You will be taken to the "Devices" tab for that zone, click **+** to add devices to the zone
 - 4) You will be taken to the "Add a device" tab and the Airlink Blue devices should populate on the screen
 - 5) Tap a device to add it to the zone. The device will identify itself by flashing. If this is the correct device tap **ADD**
 - 6) Add the remaining required device in the zone
 - 7) Once the progress bar says 100%, and you have added all devices for that zone, select "DONE"

