

INSTALLATION AND ASSEMBLY INSTRUCTIONS Adjustable Slip Fitter (BKA ASF)

WARNING: For use with approved Luminaires only. Consult Factory.

WARNING: Failure to follow instructions could result in damage to product and void warranties!**WARNING:** Risk of fire or electrical shock. Disconnect power before installing or servicing. **WARNING:** Verify the existing input voltage and ensure it matches input rating on luminaire's product label, located on luminaire.

WARNING: Before proceeding, read all instructions carefully to ensure proper and safe installation

IMPORTANT: Never connect components under load!

Kit consists of hardware and BKA ASF.

1. Using supplied hardware and BKA ASF, assembly on Tenon, aim in desired direction and securely tighten the (4) set screws-(15 FT-LB). Making certain that the BKA XNM ADJ is plumb. Install (1) self-drilling fastener through the clearance hole in the BKA and into the Tenon
2. Remove the access cover and O-ring, set aside
3. Loosen the 1/2-13 bolt and aim the BKA ASF to desired angle. Retighten bolt. (25 FT-LB)
4. If luminaire does not have arm gasket, install provided gasket sealing fixture to bracket.
5. Install the Luminaire onto the two 1/2-13 studs. Securely tighten (2) 1/2-13 nuts, supplied with the Luminaire (25 FT-LB)
6. Wire Luminaire according to NEC and local codes
7. Re-install the wire access cover and O-ring with the (2) screws supplied

Installation Questions
Call LSI Field Service Dept.
800-436-7800 ext. 3300

LSI Industries Inc. 10000 Alliance Rd. Cincinnati, OH 45242 www.lsicrop.com/lsi 685963 Rev 01-02-19

INSTALLATION AND ASSEMBLY INSTRUCTIONS Adjustable Slip Fitter (BKA ASF)

