

# INSTALLATION AND ASSEMBLY INSTRUCTIONS

## LAD4R / LAD6R / LAD8R Series (Type non-IC)

SMARTVISION®


**WARNING:** Failure to follow instructions could result in damage to product and void warranties!

**WARNING:** Risk of fire or electrical shock. Disconnect power before installing or servicing.

**WARNING:** Verify the existing input voltage and ensure it matches input rating on luminaire's product label, located on inside of access cover.


**WARNING:** Before proceeding, read all instructions carefully to ensure proper and safe installation.

**IMPORTANT:** This product must be installed in accordance with the applicable installation code by persons familiar with the construction and operation of the product and the hazards involved.

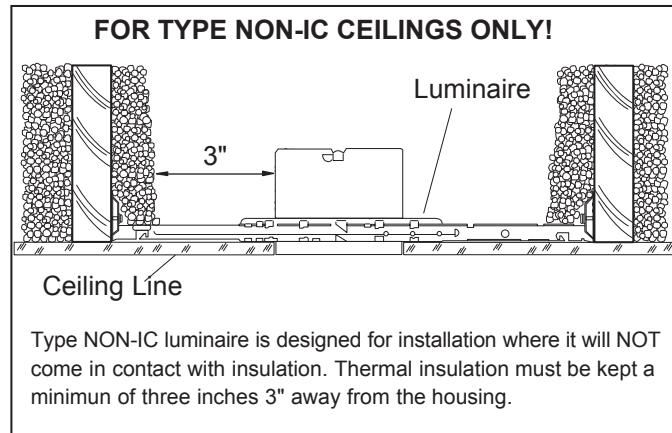

### INSTALLATION INTO NEW DRYWALL

1. Find location between 2 joists for luminaire installation. Make sure enough room exists above for luminaire. Luminaires are suitable to install into 1/2" - 5/8" (13-16mm) thick ceiling material.
2. Cut correct hole size for luminaire model: **LAD4R requires 4-3/8" (111mm) dia. hole and LAD6R requires 6-1/2" (165mm) dia. hole and LAD8R requires 8-1/8" (206mm) dia. hole.**
3. Pull supply wiring up to J-box of luminaire. Make required electrical connections per NEC and local code.
4. Push all electrical connections inside J-box. Install J-box cover.
5. Feed luminaire thru hole in ceiling.
6. There are 3 clips that will secure luminaire to ceiling material surface. Using screwdriver and hammer, push all 3 clips upwards into reflector cup, capturing ceiling material. All 3 clips should be pushed fully into reflector cup, flush with inside.
7. With Trim in hand, attach tether to inside reflector cup; allow to hang. Make male-female electrical connection. Install trim by squeezing together both leg clips.
8. Installation is complete.

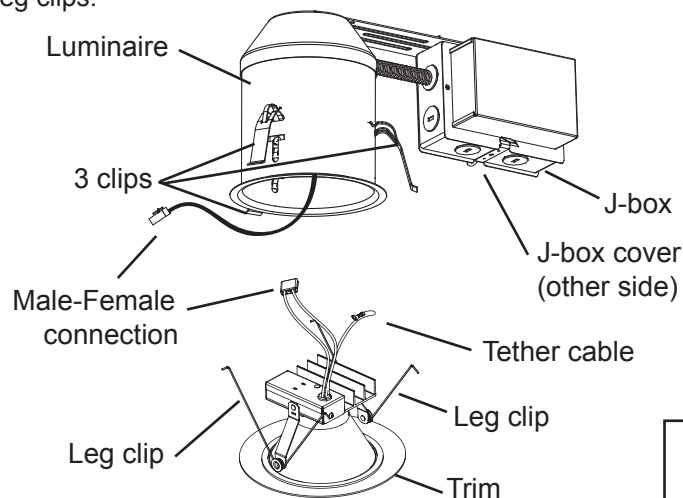

**Installation Questions?**  
Call LSI Field Service Department at:  
1-800-436-7800 Ext. 3300  
Fax: 1-877-861-1368

