
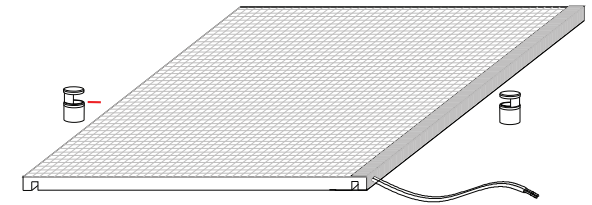



# Artistic Light Panels

Figments of your Illumination™


## Installation Guide

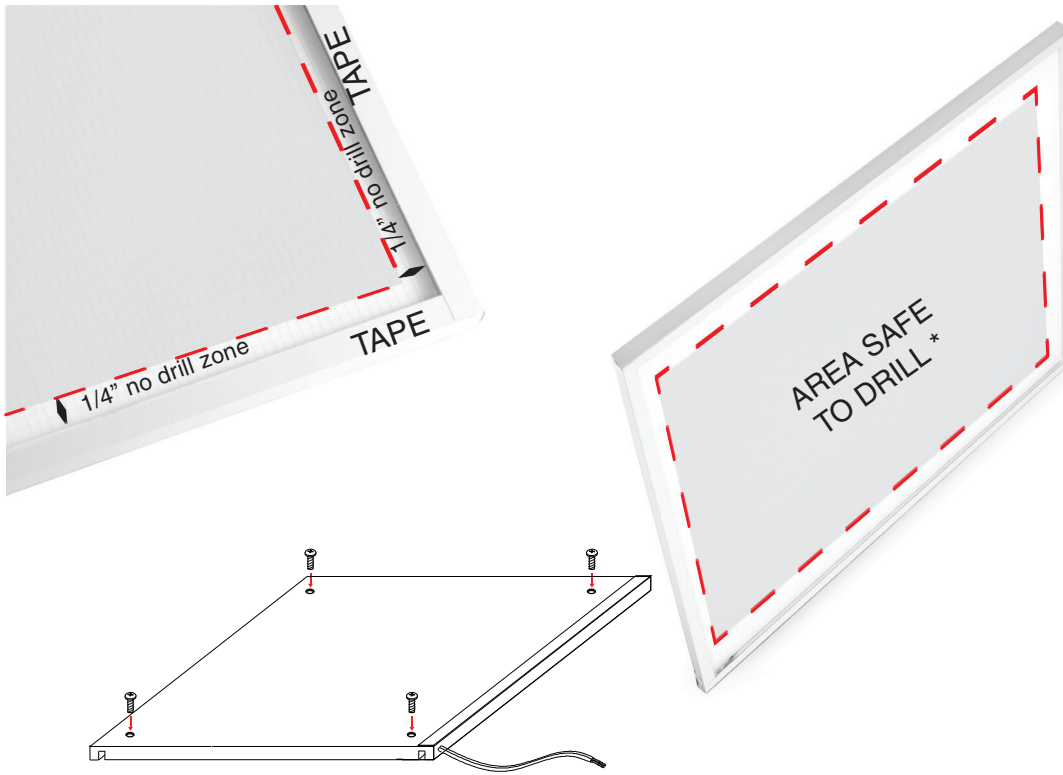

PANEL WITH STANDOFFS

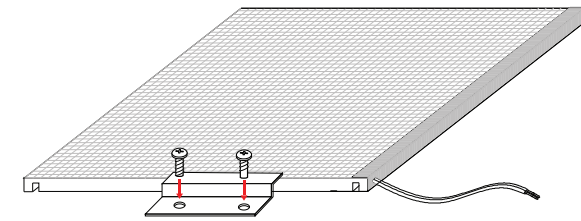

PANEL WITH Z CLIPS

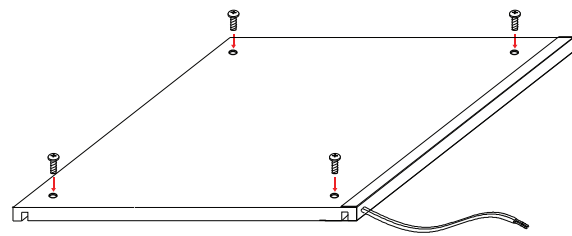

PANEL WITH PRE-DRILLED HOLES



### INSTALLATION INSTRUCTIONS

- Drill pilot holes before securing panel with screws
- Use the highest grit drill bit as possible
- Drill on a flat supportive surface
- Drill from the back to the front to get thru the reflective film first

\*Holes can be drilled at factory according to drawings supplied (recommended).



### HANDLING INSTRUCTIONS

- Handle with care
- The panel is acrylic and may splinter
- Do not hit LEDs on the perimeter
- LED may be replace in the field in case of damage
- We highly recommended factory pre-drilled holes when using screws for installation as panel may splinter

\*LSI is not responsible for any splintering or any other errors that may occur when drilling a panel on site.



### SURFACE MOUNTING OPTIONS

- C Channels
- Z Clips
- Mirror Clips
- Blocking
- Standoffs
- Panel can be secured to drywall with screws

\*Mounting accessories are not provided.

