
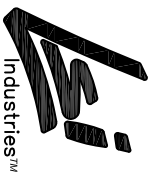


SEAL PACK Instructions

1. Make wiring connections in wiring compartment using silicone filled wire nuts (provided).
2. Use Mastic (provided) to seal the conduit entries and to prevent the sealant from flowing down into the conduit.
3. Push wire nuts to the bottom of the wiring compartment.
4. Open envelope and remove inner pouch.
5. Grasp each side of the pouch and pull firmly until there is no barrier between the two solutions.
6. Mix by alternately squeezing each end of the bag, moving the material back and forth until completely mixed together (approx. 1 minute).
7. Clip off corner of pouch and use immediately. Sealant will set in 20 minutes.
8. Pour the Seal Pack contents into the wiring compartment, covering the wire nuts with the sealant as shown in the illustration.

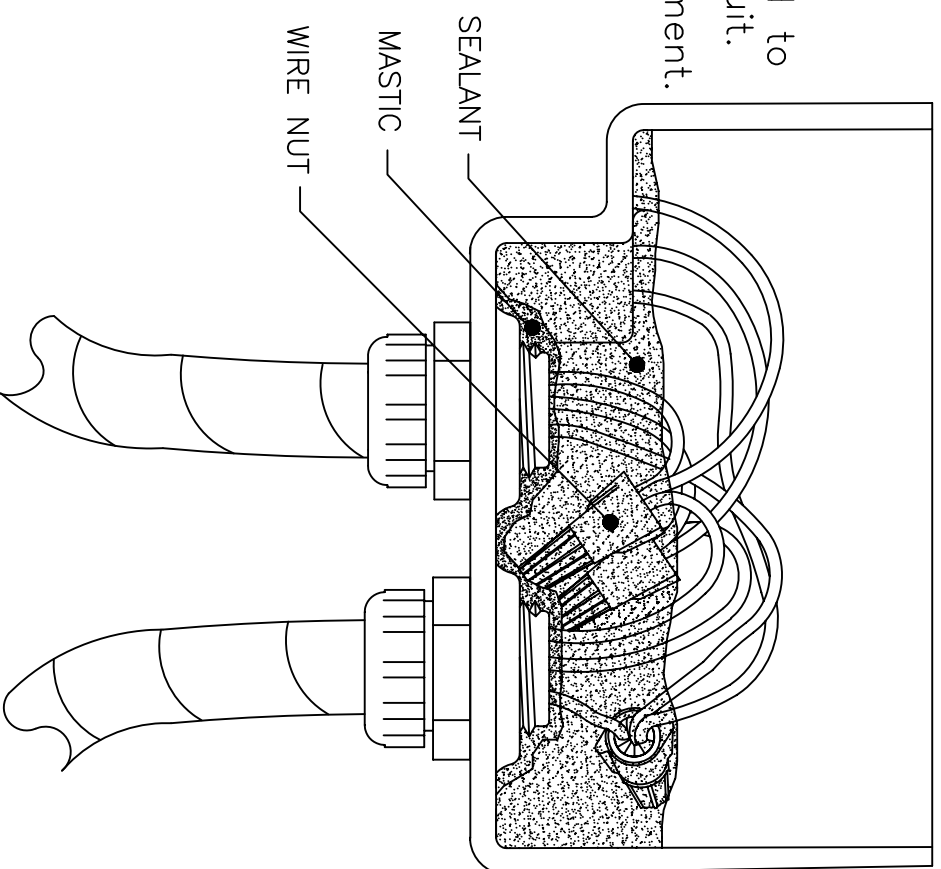

LSI LIGHTING SOLUTIONS PLUS
10000 ALLIANCE ROAD, CINCINNATI, OH 45242
(513)793-3200 FAX(513)793-0147
www.lsi-industries.com

COPYRIGHT © 2012 LSI INDUSTRIES INC

INSTALLATION QUESTIONS?
CALL LSI FIELD SERVICE
800-436-7800 EXT 3300
FAX 513-984-9723

REV B 6/12
P/N 45125