


# REFLECTOR ROTATION


## Citation Large and Soft Lite

---

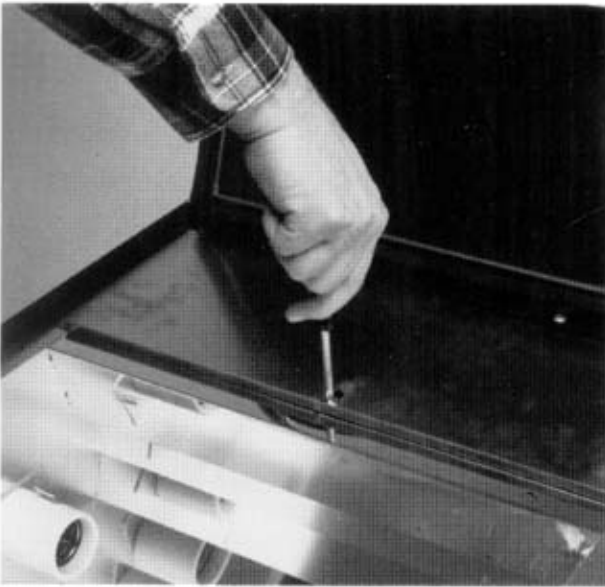


**STEP 1:** Open the fixture door by loosening fasteners. (Not shown.)

**STEP 2:** Using a Phillips head screwdriver, loosen ballast compartment cover screw, located next to the reflector.

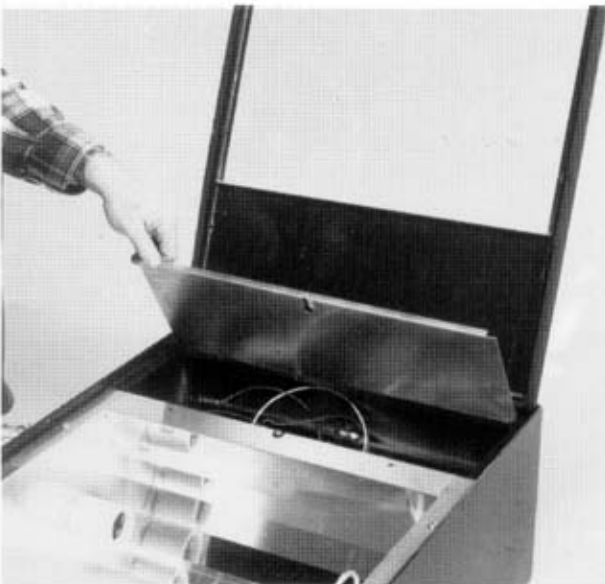


**STEP 3:** Slide ballast cover forward to allow retaining screw clearance. (Not shown.)

**STEP 4:** Lift ballast cover to allow for removal of reflector.

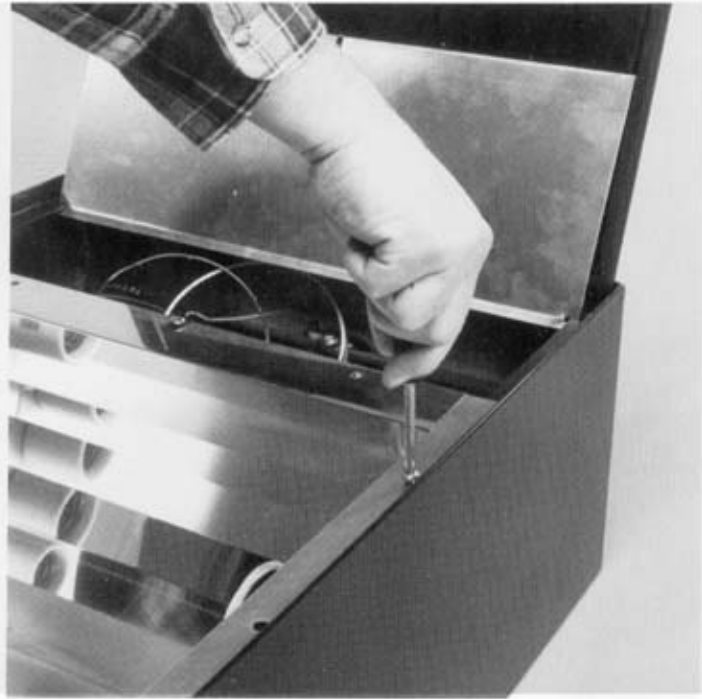


**STEP 5:** Remove #10 retaining screws from perimeter of reflector's flange. There are four of these screws (two on both left and right sides).

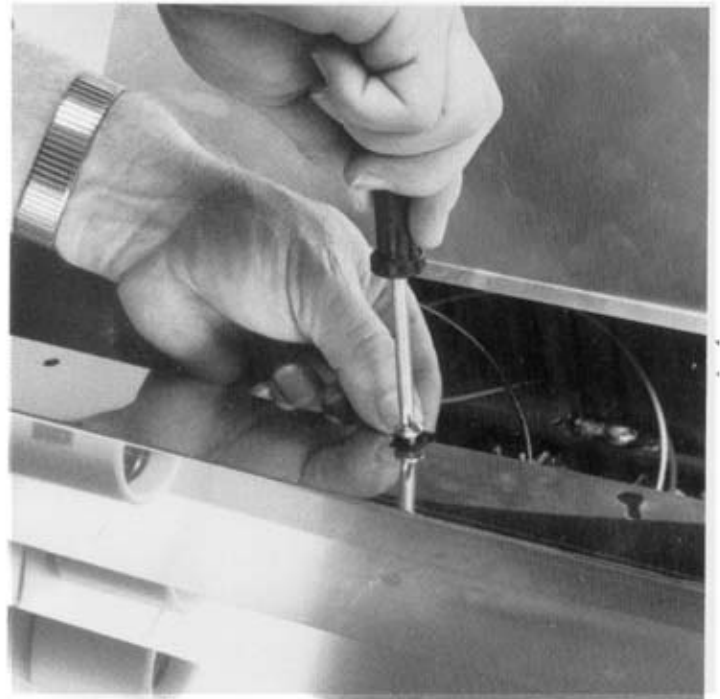

**STEP 6:** Complete the removal of the ballast cover retaining screw and screw clip. **Note:** Be sure to keep the #10 screw clip with the screw for later use.




**STEP 7:** Lift reflector from the housing. There should be plenty of room for movement with longer wiring from ballast to socket.

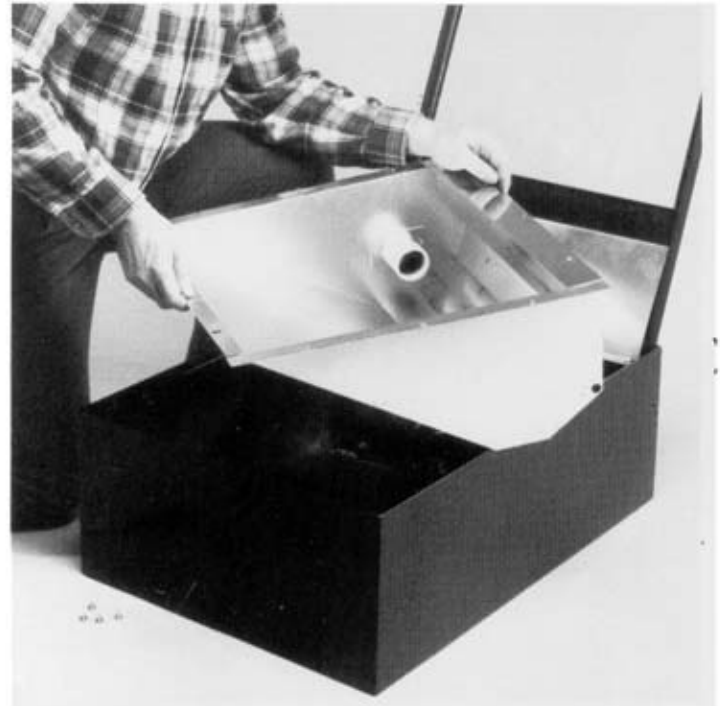

**STEP 8:** Rotate the reflector to desired direction. **Note:** The slope of the reflector indicates the direction the light will be thrown away from the lamp. The direction is either one-quarter of a turn to the right, or one-quarter of a turn to the left.



**STEP 9:** Place the reflector back into the housing and line up the screw holes.

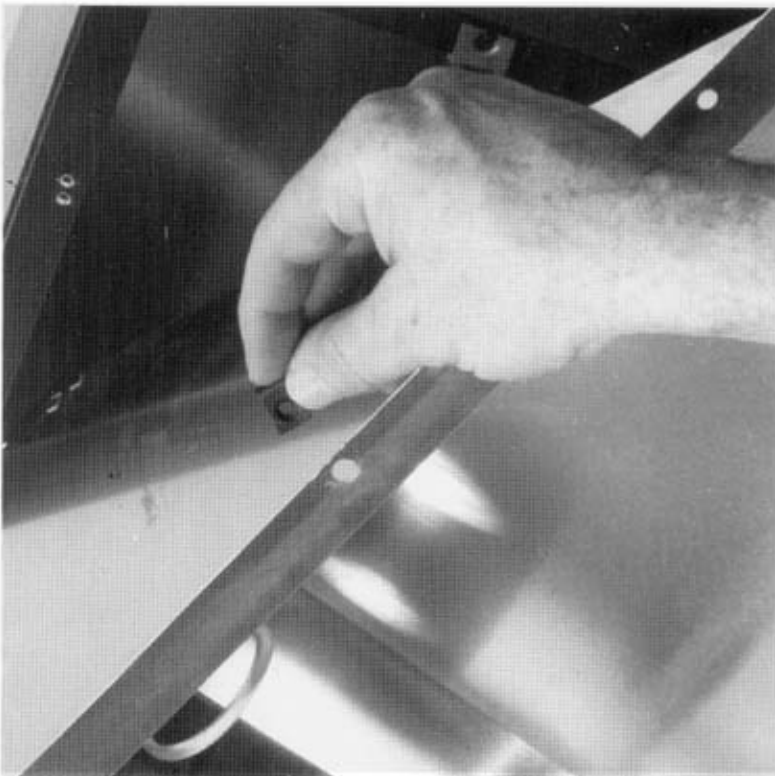

**STEP 10:** Replace the #10 screw clip in the hole on the reflector flange side closest to the ballast cover.



**STEP 11:** Replace the #10 retaining screws through the reflector's flange. These screws go back into the same holes in the housing from which they were removed. **Note:** *The screws will go into different holes in the reflector flange than from where they were taken.*

**STEP 12:** Refer to installation instructions on separate sheet for mounting, wiring, lamp installation, etc.

**STEP 13:** Place ballast cover down over the reflector flange, and align the hole on the cover with the #10 screw clip. (Not shown.)

**STEP 14:** Screw #10 retaining screw through aligned hole in Step 13, and tighten until ballast cover cannot move. (Not shown.)

**STEP 15:** Close door frame and lock into place. (Not shown.)



LSI LIGHTING SYSTEMS, A Division of LSI Industries Inc.

10000 ALLIANCE ROAD • P.O. BOX 42728 • CINCINNATI, OHIO 45242-0728 • (513) 793-3200 • FAX (513) 984-1335