



## LED MIRADA SMALL Wall Light XWS

### SAVE THESE INSTRUCTIONS



#### BEFORE YOU BEGIN

Read and follow all safety Instructions



### WARNING

#### RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

- This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electric Code) and all local codes.
- Turn off electrical power before inspection, installation or removal.
- Use only UL (or other NTRL) approved wire for input/output connections. Minimum size 18 AWG or 14 AWG for continuous runs.
- Make sure LEDs and drivers are cool to touch when performing maintenance. Make sure the supply voltage is the same as the rated voltage of the luminaire.
- Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.
- Keep tightly closed when in operation



### PREPARE ELECTRICAL WIRING



#### Electrical Requirements

- The LED driver must be supplied with 120 to 277V, 50/60 Hz and connected to an individual, properly grounded branch circuit protected by a 20 Ampere circuit breaker. Use min. 60°C supply.



#### Grounding Instructions


- The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes

### TOOLS AND MATERIALS REQUIRED

- 1/8" Hex Key
- Wire Strippers
- Wire Cutters
- Drill with assorted bits
- Mounting Hardware

#### Before Starting


- Ensure that the supply power is shut off.
- Unpack the fixture and ensure that there are no damaged or missing parts

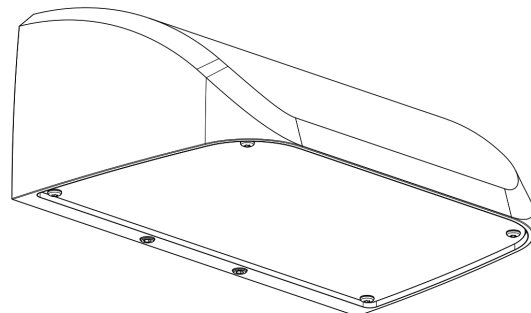




## INSTALLTION STEPS (WITHOUT EMERGENCY BACKUP)

1. a) Remove the quick mount bracket from the fixture base by loosening the two screws.
2. a) Install the quick mount bracket on a junction box in the desired location using hardware appropriate for the mounting surface (provided by others).
3. a) Connect the fixture power leads to the supply leads using the included wire nuts (see wiring diagram).
4. a) Detach the aircraft cable hook from the junction box (or mounting surface) and luminaire.
5. a) Attach the fixture base back to the quick mount bracket by hooking the top of the bracket into the bracket on the back side of the fixture base. Then lower the fixture until flush with the quick mount bracket to the fixture base by tightening the two screws.

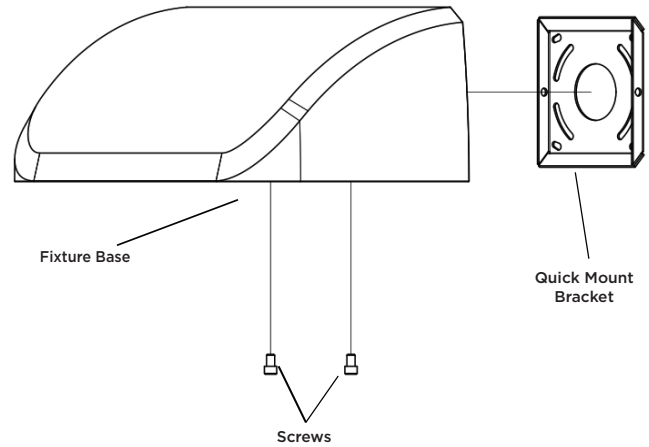


## Standard Wiring Diagram

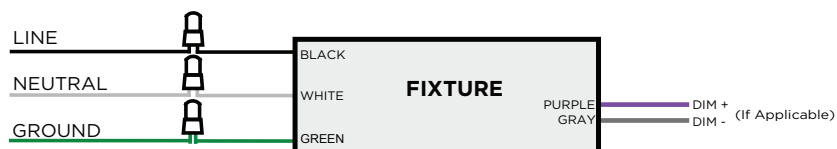



## INSTALLTION STEPS (THRU-WIRING)

1. a) Remove the quick mount bracket from the fixture base by loosening the two set screws.
2. a) Install the thru-wiring junction box in the desired location using hardware appropriate for the mounting surface (provided by others).
3. a) Attach the aircraft cable hook to the fixture base, and to a secure point in the junction box.
4. a) Connect the fixture power leads to the supply leads using the included wire nuts (see wiring diagram).
5. a) Attach the fixture base back to the thru-wiring junction box by hooking the top of the box into the bracket on the back side of the fixture base. Then lower the fixture until flush with the thru-wiring junction box and wall.
6. a) Secure the thru-wiring junction box to the fixture base by tightening the two set screws.
7. a) Optional - Remove the 1/2" conduit plugs on sides of the junction box to install conduit for thru-wiring. Use thread sealant for water-proofing.

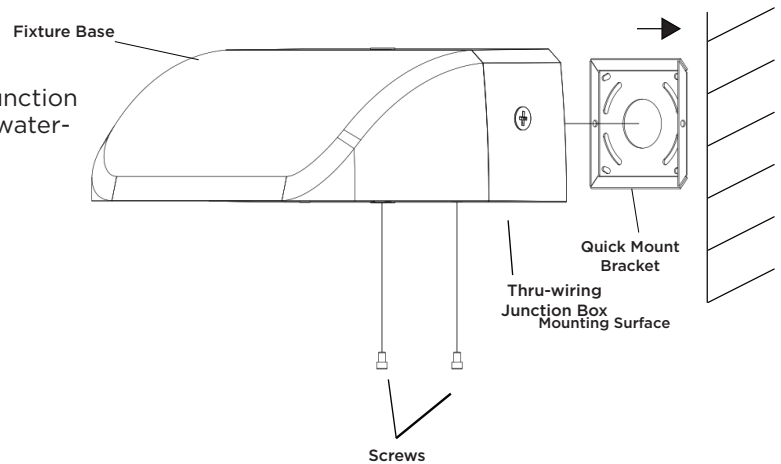

## Standard Wiring Diagram

